



# MOTOROLA

## CLP Series Two Way Radio Basic How-To Operations

### 1. What's in the box?

- a. Upon receiving your CLP radios, there are multiple items included that need to be identified. Included items in the packaging are: CLP handset, Single wire swivel earpiece, Swivel belt clip holster, Lithium ion battery, single unit drop-in charging cradle with power supply and CLP user manual.

### 2. Basic Operation

- a. CLP radios operate using a basic push-to-talk function. Make sure that you have an earpiece connected, hold the ear piece mic 6-8 inches from your mouth and press and hold the PTT button to transmit a message. Speak at a normal volume level. Only one radio can transmit at a time while all other radios receive. If multiple radios' PTT buttons are pressed at the same time, the one that was pressed first takes priority.
- b. Multiple channels, available with the CLP1040 or CLP1060, allows for separate conversations to occur simultaneously. This is best utilized if a location has different teams or departments that desire private conversations. To switch to a different channel, press the **MENU** button to hear the "Channel Number" voice prompt and then press the + or - button on the left of your radio to change to the desired channel number.
- c. CLP radios require an earpiece for use, for that reason an earpiece is included with every radio. To ensure that your earpiece is connected properly, make sure that your radio is turned OFF and firmly screw the earpiece into the accessory port on top of the radio. Turn the radio on, and press the PTT button on either the front of the radio or ear piece wire to transmit. To adjust the earpiece volume, press either the + or - button on the left side of the radio.

