

# CLS Series Two Way Radios

## Reprogramming

1. **Turn the radio off**
2. **Enter programming mode by doing the following**
  - a. Press and hold the PTT button and the MON button
  - b. Turn the radio on, keeping those buttons held down until you hear a chirp
  - c. If done successfully, you will see a PROG in the bottom left of the screen
3. **Adjust your settings**
  - a. You will see a flashing channel number. Press + or – to go to the desired channel number that needs to be adjusted
  - b. Press the MENU button to cycle through your settings
    - i. 1<sup>st</sup> press will be your frequency setting, to change press + or –
    - ii. 2<sup>nd</sup> press will be your code setting, to change press + or –
4. **Save your settings**
  - a. To save your settings, press and hold the PTT button until you hear a low pitch beep. The PROG on the screen will go away.
5. **Test and enjoy!**

