

# CLPe Series

## Manual Programming Cheat Sheet

1. Turn the radio OFF
2. Enter programming mode by doing the following (must have earpiece connected)
  - a. Press and hold the **PTT**, **MENU**, and **POWER** buttons.
  - b. Keep all three buttons held down until you hear a chirping pattern with a “programming mode” voice prompt. The LED should be blinking GREEN.
3. Adjust your settings
  - a. Tap the **MENU** button once, and you will hear a channel number. Press **VOLUME UP** or **VOLUME DOWN** button to select your desired channel, once on your desired channel, proceed to below steps:
    - i. Tap the **MENU** button once, and you will hear a “Frequency” number. Change to the desired number by pressing the **VOLUME UP** or **VOLUME DOWN** button.
    - ii. Tap the **MENU** button once, and you will a “Code” number. Change to the desired number by pressing the **VOLUME UP** or **VOLUME DOWN** button.
    - iii. IF you need to change the settings on additional channels, tap the **MENU** button again until you hear the “Channel” number prompt and repeat the steps above. If you are finished, proceed to the next step to save your settings.
4. Save settings and exit programming mode
  - a. To save settings and exit programming mode, press and hold the **PTT** button until the radio beeps. The LED will go back to the normal color according to radio channel (Red for Ch 1).

